
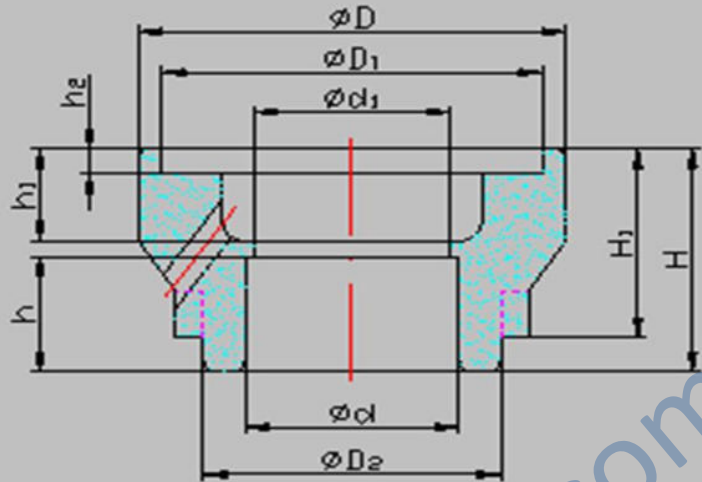


Shock Absorber Guide


TYPE 1

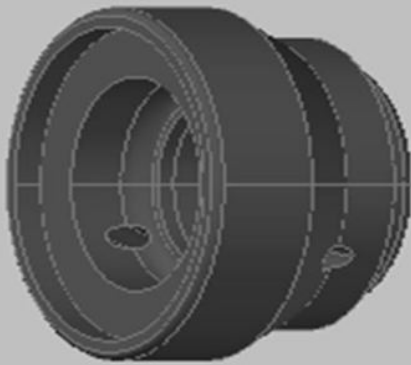

Model	ØD	ØD1	ØD2	Ød	Ød1	H	H1	h	h1	h2
BM-WF020	54	49	36	17	16	26	18.5	13.2	11.5	4.9
BM-WF020-A	54	49	36	17	16	26	18.5	12	12.5	5.7
BM-WF052	47	39	30	17	15.5	26	20	12.5	11	3
BM-WF060	53	42	36	28	26	29	23	17	9.3	3.3
BM-WF119	47	41	30	25	22.8	26	22	15	9.6	4
BM-WF120	42	37	32	25	22.8	22	18	12.5	8	3
BM-WF119-B	47.3	41	32	26	22.8	27	23	15.4	9.2	3.3
BM-WF169	47	42	35	28	25.8	29	25	17	9.3	3.5
BM-WF237	36	30	30	16.5	14	27	22.5	10.4	12	2.8
BM-WF238	36	30	25	16.5	14	27	22.5	10.4	12	2.8
BM-WF260	39.6	34.6	30	25	23.5	26.5	22.5	12.5	12	2.9
BM-WF261	41.8	34.6	30	26	23	27	23	15.4	10	2.9
BM-WF265	45	40	32	21	19	28		15	10.5	3.3
BM-WF266	36	32	27	14	12	19.2	15.2	7	9.8	2.8
BM-WF281	43	37	30	15.5	13	21	16	8	10	2.8
BM-WF282	40	36	30	15.5	13	21	16	8	10	3.5
BM-WF283	40	36	27	15.5	13	21	16	8	10	3.5
BM-WF291	47.3	42.1	36	28	26	36	31	17	13	3.4
BM-WF297	43.5	39	32	17	15.8	28.5	23.5	15	12	3.4
BM-WF297-A	43	39	30	17	15.8	28.5	22	15	12	3.8
BM-WF298	42.5	34.8	30	23	21	29	24.5	15	9	3
BM-WF299	43	35.5	27	14.4	13	20.5	14.5	8.6	10.5	3.2
BM-WF300	42.5	39	30	23	21	27.5	19.5	15	10.8	2.8
BM-WF348	39.5	35	32	25	23.5	26.2	22.5	12.5	12	2.8
BM-WF348-B	39.5	35	30	25	23.5	26.5	22.5	12.5	12	2.8
BM-WF349	36	32	27	14.4	13	20.5	14.5	8.6	10.5	2.8
BM-WF349-B	36	32	27	14.5	13	21.5	16.5	8.5	10.5	2.8
BM-WF353	46	41	32	23	21	29	24.5	15	12	3.3
BM-WF352	46	41	32	25	23	26.5	22	12.5	9.1	3.5
BM-WF353-B	44	41	30	23	21	29	24.5	15	12	3.3
BM-WF359	41	37	30	23	20.8	27	21	15	10	3.4
BM-WF369	43.4	38.8	30	18	16	22.7	18.7	10.4	10.5	3.8
BM-WF381	44.4	38	30	20	18.8	30	24	16	12	3
BM-WF382	44.4	39	30	23	20.8	30	24	16	12	3.6
BM-WF388	36	33.4	27	13	12	20.5	14.5	8.5	10.5	2.9
BM-WF389	42.4	39	30	23	21	26		15	8.8	2.8

Shock Absorber Guide



TYPE 2

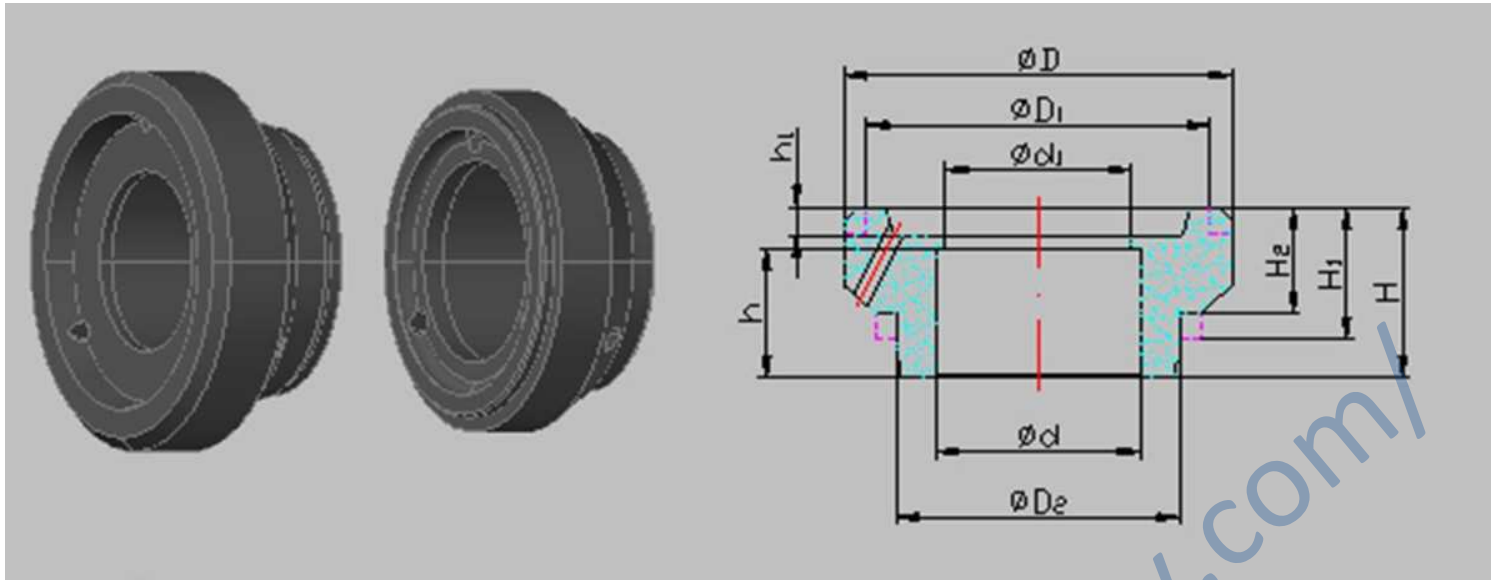

Model	$\varnothing D$	$\varnothing D_1$	$\varnothing D_2$	$\varnothing d$	$\varnothing d_1$	H	H1	H2	h	h1
BM-WF014	30		25	13	11.4	16.5		11.5	8	7
BM-WF046	43.9		32	23	21	19.7		12.2	15	3.2
BM-WF046-A	43.9		30	25	23.5	17.2		12.2	12.5	3.2
BM-WF058	45.4		36	28	26	24	19	14	17	3.3
BM-WF115	46.5		32	25	22.8	21	13.5	12.5	12.5	6
BM-WF118	40		30	23	20.8	19.5	12	11	12.5	6
BM-WF170	48		32	25	22.8	23.5	13.5	12.5	15	6
BM-WF171	46.7		32	25	22.5	21		13	12.5	3
BM-WF212	45		30	20	19	20	16.8	10.5	10.4	7
BM-WF212-A	45		30	22	21	20	16.8	10.5	10.4	7
BM-WF231	36	32	27	23	21	16	12	11	10.5	1.5
BM-WF239	45.3		30	23	21	22	18	12.5	11.8	6.9
BM-WF242	33	25	25	14.5	13.5	11		7	8.2	1.3
BM-WF275	34		27	23	20.6	18		13	10	6
BM-WF288	34		25	23	20.6	19		14	12	5
BM-WF384	39.5	36	30	25	23.5	16.5		12.6	12.4	1.6

Shock Absorber Guide



TYPE 3

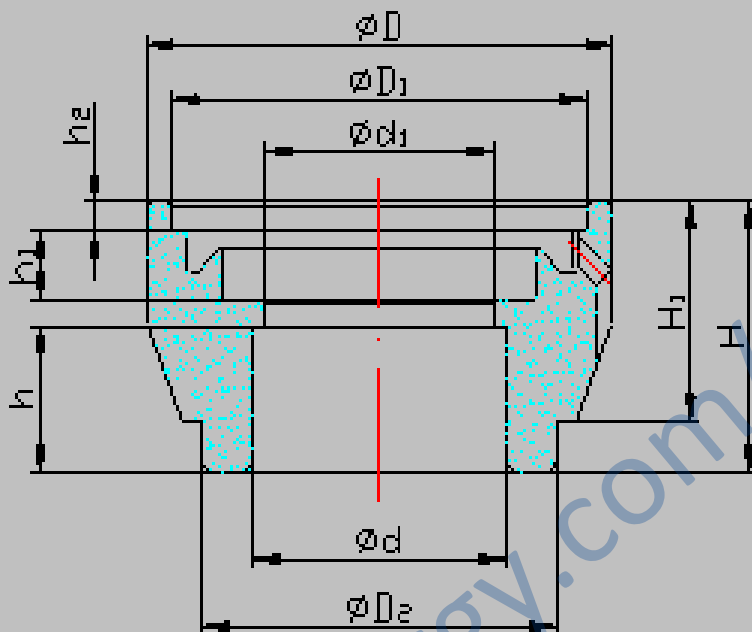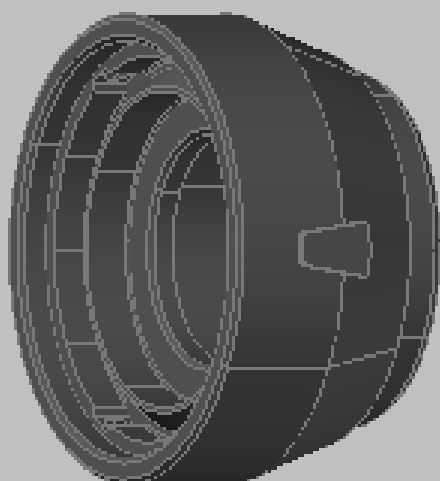

Model	ØD	ØD1	ØD2	Ød	Ød1	H	H1	h	h1	h2
BM-WF007	46	41	35	25	22.6	26.5	21.5	14.3	6.6	3
BM-WF008	43	38	32	18	15.6	26	21	14.3	5.5	3
BM-WF018	42.5	38	30	23	20.6	26	21	14.3	5.8	3.4
BM-WF279	43	38	30	19	16.6	24	19	12.3	5.5	3
BM-WF280	49	43	35	19	16.8	24	20	12.3	6	3
BM-WF286	47	43	36	28	25.6	23	18	12	5.5	3
BM-WF287	43	36	30	12.5		17	13		5.7	3
BM-WF292	40	36	30	15.5	13	21	16	10.3	5.7	3
BM-WF293	43	36	30	15.5	13	21	16	10.3	5.7	3
BM-WF294	47	42	35	21	18.6	26	21	14.3	6.5	3
BM-WF340	57	42.4	45	20		32	27		8.2	2.8
BM-WF350	40	36	27	15.5	13	21.4	16	10.3	5.5	3
BM-WF351	36	32	25	15.5	13	21	16	11	5	3
BM-WF364	51	46	32	25	22.6	27	22	14	7	3.8
BM-WF367	46	41	32	25	22.6	26.5	21.5	14.3	6.6	3
BM-WF367-A	46	41	30	25	22.6	26.5	21.5	14.3	6.6	3
BM-WF368	54	49	36	31	28.6	25	20	13.3	5.7	3
BM-WF372	47	42	32	23	20.6	26	21	14.3	6.5	3
BM-WF372-A	46	42	32	23	20.6	26	21	14.3	6.5	3
BM-WF378	51	46	36	25	22.6	27	22	14	7	3.8
BM-WF379	42.5	38	30	21	18.6	26	21	14.3	6.1	3
BM-WF390	30	26	20	13	10.6	21	16	11	5	2.5
BM-WF396	47	42	32	18	16	26	21	14.3	6.5	3

Shock Absorber Guide



TYPE 4

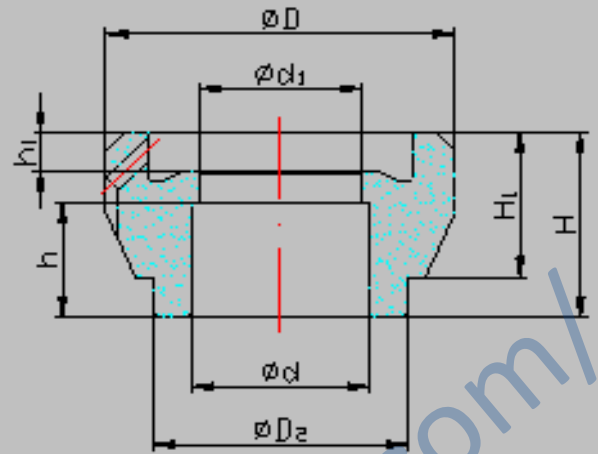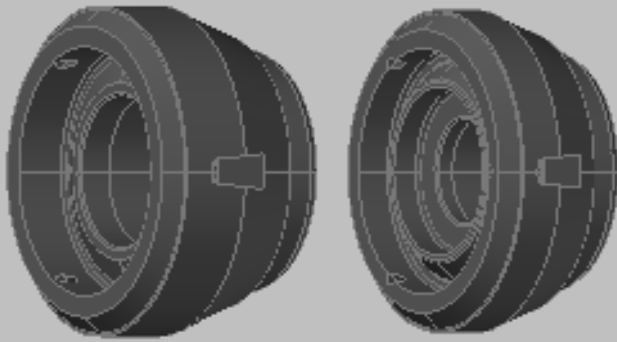

Model	ØD	ØD2	Ød	Ød1	H	H1	h	h1
BM-WF015	Ø47	Ø32	Ø25	Ø22.6	26	22	17	2
BM-WF016	Ø50	Ø35	Ø28	Ø25.6	25	21	17	2
BM-WF019	Ø36	Ø27	Ø23	Ø20.6	22	17	14.3	5.4
BM-FF274	Ø46	Ø32	Ø25	Ø22.6	23	18	14.3	4.7
BM-WF276	Ø43	Ø32	Ø18	Ø15.6	23	18	14.3	1.9
BM-WF277	Ø41	Ø30	Ø21	Ø19	23	18	14.3	4.7
BM-WF278	Ø49	Ø35	Ø19	Ø16.6	23	18	14.3	2
BM-WF284	Ø36	Ø27	Ø21	Ø18.6	25	20	16.5	5.2
BM-WF285	Ø46	Ø32	Ø23	Ø20.6	23	18	14.3	2
BM-WF285-A	Ø46	Ø30	Ø23	Ø20.6	23	18	14.3	2
BM-WF289	Ø41	Ø30	Ø23	Ø20.6	28	23	18	4.7
BM-WF371	Ø53.5	Ø44.3	Ø25	Ø22.6	22	17	14.3	1.5
BM-WF400	Ø51	Ø32	Ø25	Ø22.6	27	22	17	2
BM-WF420	Ø40	Ø30	Ø15.5	Ø13.2	18	13	10.3	2
BM-WF421	Ø40	Ø27	Ø15.5	Ø13.2	18	13	10.3	2
BM-F422	Ø36	Ø27	Ø15.5	Ø13.2	18	14	10.2	4.7
BM-WF423	Ø41	Ø30	Ø23	Ø20.6	22	17	14.3	4.7
BM-WF424	Ø46	Ø35	Ø25	Ø22.6	23	18	14.3	4.7
BM-WF425	Ø44	Ø32	Ø23	Ø20.6	23	18	14.3	4.7
BM-WF426	Ø47	Ø32	Ø18	Ø15.6	23	18	14.3	2
BM-WF427	Ø47	Ø30	Ø18	Ø15.6	23	18	14.3	2

Shock Absorber Guide


TYPE 5

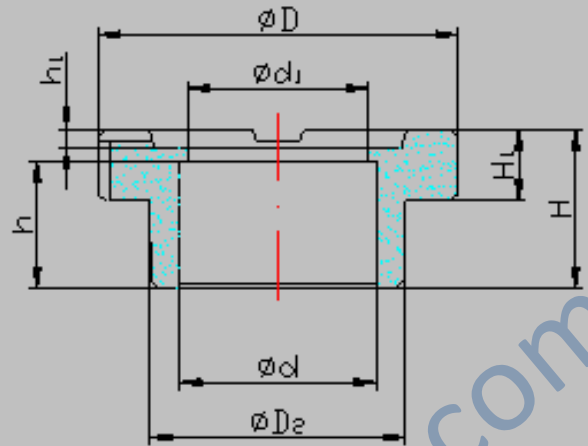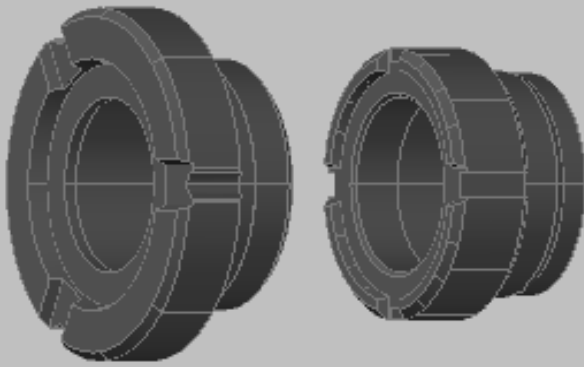

Model	ØD	ØD2	Ød	Ød1	H	H1	h	h1	Groove Width
BM-WF009	Ø37.5	Ø27	Ø20	Ø18.4	19	11	15.5	1.5	2 -5.5
BM-WF102	Ø38.7	Ø30	Ø23	Ø21	19	8.5	15.2	2.3	3-5
BM-WF102-A	Ø38.7	Ø30	Ø20	Ø18.8	18	8.5	15.2	2.3	3-5
BM-WF122	Ø36.5	Ø32	Ø25	Ø23	18	13	12.5	3.5	4-4
BM-WF129	Ø32.5	Ø27	Ø23	Ø21	19	10	11.8	1.2	4-4
BM-WF168	Ø32	Ø27	Ø14	Ø12	15	10	10.4	1.5	4-5
BM-WF203	Ø40	Ø32	Ø18	Ø15.5	12.5	7	10	1	3-5.5
BM-WF204	Ø37	Ø32	Ø28	Ø26	17.5	12	15	1	3-5.5
BM-WF205	Ø33	Ø30	Ø14	Ø11.8	15	10	10.4	1	3-5.5
BM-WF218	Ø38.2	Ø30	Ø23	Ø21	16	9.5	12	1	3-5.4
BM-WF219	Ø43.2	Ø32	Ø25	Ø22.8	19.5	11	14.5	2.5	3-5
BM-WF241	Ø41.2	Ø30	Ø23	Ø21.2	19	10	11.8	1.2	4-4
BM-WF253	Ø41	Ø30	Ø26	Ø23.2	19	10	15.2	2	4-6
BM-WF254	Ø47	Ø32	Ø28	Ø26	20	11	15	2.5	4-6
BM-WF255	Ø37.6	Ø30	Ø23	Ø21.2	19	10	11.8	1.2	4-4
BM-WF333	Ø41	Ø30	Ø26	Ø22.8	19	10	15.4	1.2	4-4
BM-WF341	Ø38	Ø30	Ø14.5	Ø13.3	12	8	8.2	1.8	4-5
BM-WF383	Ø42.1	Ø30	Ø23	Ø21	19	8.5	15.2	2.3	3-5
BM-WF383-A	Ø42.1	Ø30	Ø20	Ø19	19	8.5	15.2	2.3	3-5

Shock Absorber Guide


TYPE 6

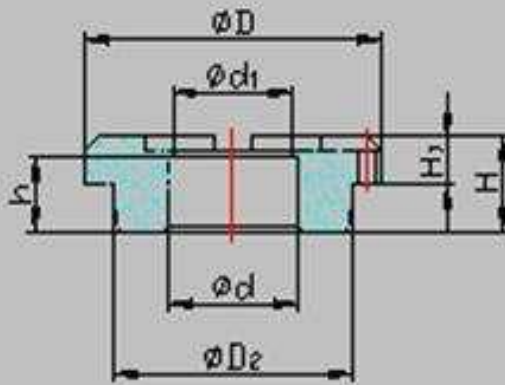

Model	ØD	ØD2	Ød	Ød1	H	H1	h	h1	Groove Width
BM-WF010	33.4	27	14.5	13.5	10.2	5.2	8	1.5	4-4

Shock Absorber Guide


TYPE 7

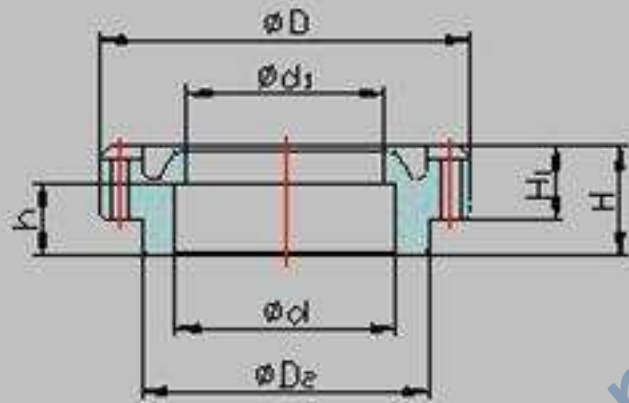

Model	ØD	ØD2	Ød	Ød1	H	H1	h	Groove Width
BM-WF011	45	35	18	15.5	15	10	12.5	4-3
BM-WF012	40.4	30	15.5	13.5	10	6	8.8	4-4
BM-WF012-A	40.4	25	15.5	13.5	10	6	8.8	4-4
BM-WF012-B	40.4	27	15.5	13.5	10	6	8.8	4-4
BM-WF194	33	27	14.4	13.2	14	9.5	8.5	
BM-WF290	38.6	30	23	20.6	12	8	8	4-5
BM-WF295	43.9	32	25	23	17	12	12	
BM-WF296	39.2	30	25	22.6	19	14.5	12	4-3
BM-WF391	33.4	27	15.5	13.5	10	6	8.8	4-2
BM-WF395	33.4	25	15.5	13.5	10	6	8.8	4-3

Shock Absorber Guide


TYPE 8

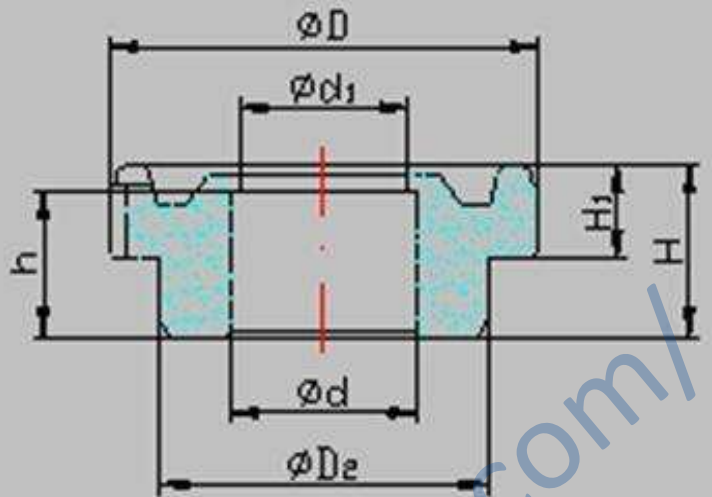

Model	ØD	ØD2	Ød	Ød1	H	H1	h	Groove Width
BM-WF051	39.2	30	17	15.5	15.5	8.5	13.2	3-4
BM-WF052	22	16	8		9	5		3-3
BM-WF217	32	25	14.4	13.1	11.5	8	8.5	3-3.5
BM-WF220	39	30	14.4	13.1	13.5	8.5	8.5	3-5
BM-WF220-A	39	27	14.4	13.1	13.5	8.5	8.5	3-5
BM-WF220-B	39	25	14.4	13.1	13.5	8.5	8.5	3-5
BM-WF310	44.4	35	15.9		12	8.6		3-3
BM-WF344	28	20	10		10	6.3		3-4

Shock Absorber Guide

TYPE 9

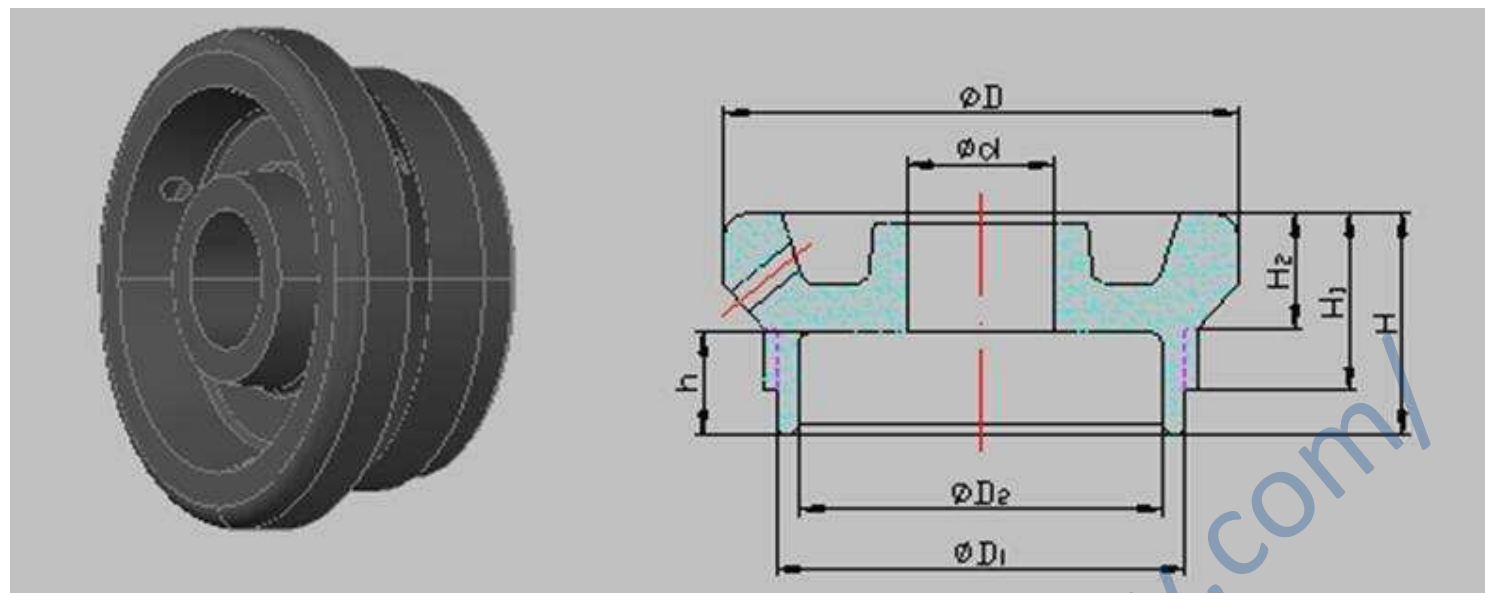

Model	$\varnothing D$	$\varnothing D_1$	$\varnothing D_2$	$\varnothing d$	H	H1	H2	h
BM-WF151	63	50		20	16.5		13	
BM-WF151-B	68	50		20	16.5		13	
BM-WF155	56.8	45	40	16	30	25	13	16.5
BM-WF155-A	57.6	45	40	16	30	25	13	16.5
BM-WF155-C	56.8	45	40	16	18		13.5	5
BM-WF166	46.6	40	33	16	26		14	8
BM-WF167	46.6	40		16	18		14	
BM-WF176	50	40	31	16	24.5	19.5	9	12
BM-WF197	47	40		16	13		9	
BM-WF198	53	40		23	18.5		14.7	
BM-WF199	38.3	30		12	10		7	
BM-WF199-A	38.6	30		12	10		7	